

# Tuf-Lite III<sup>®</sup> Fans 6000MK Series Hub

# **INSTALLATION MANUAL**



## Adjustable Pitch Fan Assembly 32.8' or 10 Meter Diameter

## Hudson Tuf-Lite III<sup>®</sup> fan blades

Hudson Tuf-Lite III<sup>®</sup> fan blades are of single piece fiberglass reinforced plastic (FRP) construction optimized for performance, reliability, noise, and cost effectiveness. Tuf-Lite III<sup>®</sup> fan blades are constructed of light weight, corrosion-resistant, fiberglass reinforced vinyl-ester resin, with materials, thickness, and processes determined from finite element analysis modeling. Tuf-Edge<sup>®</sup> leading edge erosion and UV protection is a standard with this blade.

The individually balanced blades can be replaced independently - matched sets are not required

#### **RECOMMENDED TOOLS**

- Long T-Handle Allen Wrench Set (3/16" to 3/8")
- Medium Size Flat Head Screw Driver
- Brass Ball Peen Hammer
- Flat Bastard File
- 240 Grit Sand Paper
- Anti-Seize Lubricant
- WD-40
- 12" Crescent Wrench

- Shop Towels
- Exact-A-Pitch<sup>®</sup> Digital Protractor (P/N 62375)
- 25 ft. Measuring Tape
- Pencil or Marker
- Open/Box End Wrench Set (1/2" 1-1/2")
- Socket Set for 1/2" Drive (1/2" 1-1/2")
- Torque Wrench(s) Rated for 0-200 ft-lb.

#### **INSTALLATION PROCEDURES**

### ASSEMBLY WITH BUSHING

Clean all mating surfaces between hub, bushing and shaft. All grease and lubricant should be removed, leaving the mating surfaces dry.

If there is no shoulder on shaft to prevent bushing from sliding down shaft, slide spacer/sleeve (not provided) on shaft before bushing or use a thrust retainer (optional equipment) on top of hub. Slide bushing and key onto shaft until flush with end of shaft. The shaft size determines the bushing type (U1). Lock bushing on shaft by tightening the set screw in flange with an Allen Wrench. Line up key and set hub on bushing. Engage the three (3) cap screws in flange of bushing into hub spool, using a torque wrench with a socket, and tighten evenly. Use the following table to determine the proper tools and torque values.

Bushin Size	Wrench Size	Cap Screw Size	Socket Size	Torque (ft-lb) Dry
U1	3/16"	5/8"	15/16"	140

### ASSEMBLY WITH STRAIGHT SHAFT (NO BUSHING)

Clean all mating surfaces between the hub and the shaft. If there is no shoulder on shaft to prevent hub from sliding down shaft, slide spacer/sleeve (not provided) on shaft before hub or use a thrust retainer (optional equipment) on top of hub. Install key in shaft. Line up key and keyway and set hub on shaft. Tighten set screw(s) in hub.

### ASSEMBLY WITH TAPERED SHAFT (NO BUSHING REQUIRED)

Clean all mating surfaces between the hub and shaft.

Align keyways and install hub. Install retainer plate and cap screw(s) with lock washer(s). Shaft size determines what size cap screw is necessary. Using a torque wrench with a socket, evenly tighten cap screw to recommended standard per table below.

Cap Screw	Socket	Torque Value (ft-lb)							
Size	Size	Lubricated	Dry						
5/8" NC	15/16"	100	110						
3/4" NC	1-1/8"	125	130						
1" NC	1-1/2"	150	160						

NOTE: Retaining arrangement varies with gear shaft design.

#### THRUST RETAINER (optional equipment)

Install proper load bolt (not provided) into top of fan shaft and tighten (See Figure 1). Install thrust retainer channel on top hub plate using existing hub spool cap screws. Torque cap screws to 60-65 ft-lb. Install thrust retainer eyebolt and jam nut. Hand tighten eyebolt. Tighten jam nut securely against top of thrust retainer channel.

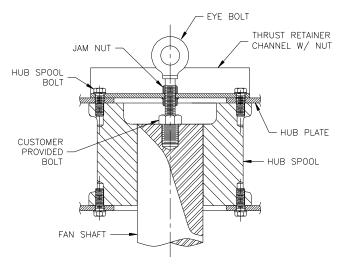


Figure 1

#### BLADE INSTALLATION

Remove blade clamp bolts, nuts, lock washers, and blade clamp halves from hub. Assemble blade clamp halves over groove in blade neck, and install into hub (See Figure 2). The thick leading edge will be to your left and thin trailing edge will be to your right as you stand at end of blade. Install clamp bolts through hub plates and blade clamp, putting bolt heads on top, lock washers and nuts on bottom. Tighten lightly (See Figure 3).



Figure 3

### SET PITCH AND TRACK

Use Hudson EXACT-A-PITCH<sup>®</sup> digital protractor (See Figure 4) or a bubble protractor to set blade pitch. Mount protractor on a flat bar as a base and place it approximately 1" from tip of blade. Note pitch on protractor. Rotate fan 360°, noting high and low pitch readings. Locate place where pitch reading is at mid-point between high and low readings, and set pitch at that point.



Figure 2



Figure 4

Rotate blade in clamp until digital protractor shows specified pitch angle to within  $+/-0.2^{\circ}$ . Fan pitch angle is shown on fan specification sheet for design duty. After desired pitch angle is set, raise and lower end of fan blade and find mid-point of blade travel. Hold blade at the midpoint. Pull blade outward so that the blade neck flange rests against the back of the blade clamps. Push blade to the right to remove all slack.

Use torque wrench to tighten clamp bolts to 120 ft-lb (lubricated) or 130 ft-lb (dry). Re-check pitch setting. Blade must be set within  $+/-0.2^{\circ}$  of desired pitch angle. Tighten clamp bolts evenly. **DO NOT OVER-TORQUE CLAMP BOLTS.** 

When bolts are tightened, hold a pencil against top end of blade and mark the level onto a fixed object, such as a pole or the fan ring.

Install remaining blades at same place as first blade, following the instructions above. After tightening bolts, mark top end of each blade in same place first blade was marked. If marks differ by 1" or more, adjust blade.

### CHECK TRACK

After fan is installed in fan stack cylinder ring, outline top side of each blade onto fan stack cylinder ring with a marker (See Figure 5). The difference between levels of highest and lowest outlines should not be more than 1". Correct blade track by loosening clamp bolts and adjusting blade to match track of other blades. Re-tighten bolts and re-check track and pitch angle setting. Re-tighten blade clamp bolts to recommended standard of 120 ft-lb (lubricated) or 130 ft-lb (dry) torque.





### CHECK SWEEP

Measure the distance from trailing edge at blade tip of one blade to trailing edge at blade tip of the adjacent blade (See Figure 5a). This distance should be within 1" of each other for all successive blades. Correct blade sweep by loosening clamp bolts and adjusting blade to match sweep of other blades. Re-tighten bolts and re -check sweep and pitch angle setting. Re-tighten blade clamp bolts to recommended standard of 120 ft-lb (lubricated) or 130 ft -lb (dry) torque.



Figure 5a

#### SEAL DISC ASSEMBLY & INSTALLATION

Install self adhesive rubber gaskets on both flanges of one seal disc half. Bolt two halves of seal disc together, using 3/8" NC bolts, flat washer, lock washer, and nut. Torque to 15 ft-lb (lubricated) and 20 ft-lb (dry).

Install 3/8" NC bolts at six (6) places on top hub plate (See Figure 6). Threaded portion of bolts must be pointing up to mount seal disc. Install lock washer, nut, and flat washer on each bolt. Tighten 3/8" NC nuts to 15 ft-lb (lubricated) and 20 ft-lb (dry).

Locate the six (6) mounting holes in seal disc and install over the six (6) bolts pointing up on upper hub plate. If difficulty is encountered, loosen bolts on seal flanges until seal disc can be mounted, then re-tighten to 15 ft-lb (lubricated) or 20 ft-lb (dry).

*NOTE*: The purpose of the seal disc is to prevent hot air from recirculating back down through the hub, increasing efficiency.


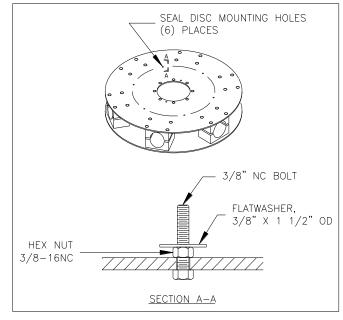


Figure 6

After mounting, install flat washer, lock washer, and 3/8" NC nuts. Tighten to 15 ft-lb (lubricated) or 20 ft-lb (dry). (See Figure 7)

Note: Refer to instructions included with seal disc for further details.



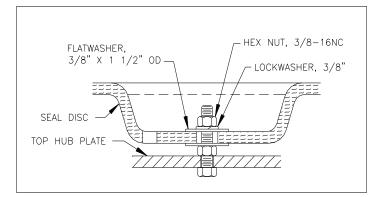

### CHECKING TIP CLEARANCE

Rotate fan in position inside fan stack to check tip clearance (See Figure 8). The recommended tip clearance is between 1" and 1 1/2". Check for spots where fan blade clearance is not within the recommended tolerance. If necessary, adjust fan stack by shimming to obtain proper clearance.

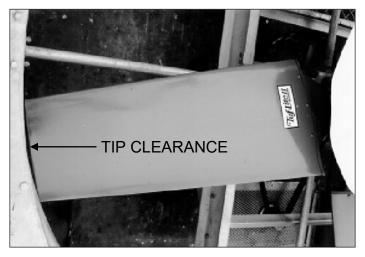


Figure 8

### **OPERATING INSTRUCTIONS**

Start fan and check rotation. Viewed from top (discharge), fan blades should rotate clockwise.

Hudson recommends to re-verify the blade clamp torque after the initial 10-15 minutes of cold operation (i.e., the fan doesn't need to be exposed to the working temperature of the process). This will ensure that the blades are settled within the clamps after the centrifugal forces have acted.


Check motor power consumption to be sure fan is pulling desired load. *CAUTION: If positive pitch is set in summer to use all available motor amps (nameplate rating), motor could be overloaded in winter.* Design pitch angles usually do not use all of the available motor horsepower. This ensures that the motors will not be overloaded at low winter temperatures.

For the fans that have remained idle (such as a shut-down or turn-around), it is highly recommended to re-verify the torque on the blade clamps before putting it back into operation.

		16 17 18 19 20	M 6816M 6817M 6818M 6819M 6820M 5M D6076M D6077M D6078M D6159M D6160M	5M D6056M D6057M D6058M D6059M D6060M		- - -	- - -	32 34 36 38 40			64 68 72 76 80	134 142 150 158 166	67 71 75 79 83	16 16 16 16 16	48 48 48 48 48 48	16 16 3 3 3 3	1 1 1 1 1	16 16 16 16 16	16 16 16 16 16	е с с с с с	4 4 4 4 4 4	1 1 1 1 1	16 17 18 19 20
ter	NO. OF BLADES	13 14 15	6813M 6814M 6815M D6073M D6074M D6075M	D6053M D6054M D6055M	QUANTITY PER ASSEMBLY	- - -	-	26 28 30			52 56 60	110 118 126	55 59 63	16 16 16	48 48 48	16 16 16	1 1	16 16 16	16 16 16	3 3 3	4 4 4	1 1 1	13 14 15
PART LIST HUDSON PRODUCTS CORPORATION Adjustable Pitch Fan Assembly 32'.8' Diameter Series 6000MK HUB	NO. C	11 12	6811M 6812M 68 D6071M D6072M D6	D6051M D6052M D6	QUANTITY	-	-	22 24			44 48	94 102	47 51	16 16	48 48	16 16	1 1	16 16	16 16	3 3	4 4	1 1	11 12
PART LIST PRODUCTS CORP tch Fan Assembly 3 Series 6000MK HUB		9 10	6809M 6810M 68 D6069M D6070M D6	D6049M D6050M D6		-	-	18 20			36 40	78 86	39 43	16 16	48 48	16 16	1 1	16 16	16 16	3 3	4 4	1 1	9 10
P. SON PROE ble Pitch Fa Series		8	6808M D6068M	M D6048M		-	-	16			32	20	35	16	48	16	1	16	16	3	4	1	8
HUD: Adjustal		6 7	6806M 6807M D6066M D6067M	D6046M D6047I		1	-	12 14			24 28	54 62	27 31	16 16	48 48	16 16	1	16 16	16 16	3 3	4 4	1 1	6 7
		PART NO	Hub Assy No. Part No.	Part No	PART NO	65058	Specify Bore	D5131	65013	65013C	79299	73720	73738	72402	73719	73731	D6004	15347	73730	59547	74540	D6102	(Varies)
		түре	U-1	U-1		Ч-1-	Ч-1	Coated	**	on**	×			1/2"				x 1					
		DESCRIPTION 32.8 Ft. Diameter Fan Shaft: 4.25" to 5.50" Dia.	81.75" Dia Hub Plate (2 Per Hub)	DESCRIPTION	Hub Spool	Bushing	Blade Clamp Half, Powder Epoxy Coated Die Cast Alum (Standard)	Powder Epoxy Coated Ductile Iron**	Coal Tar Epoxy Coated Ductile Iron**	Blade Clamp Bolt W/ Nut 3/4"-10 x 10" (Mech. Galv.)	3/4" Flat washer (316 SS)	3/4" Lock washer (Mech. Galv.)	Hub Spool Cap Screw 5/8"-11 x 1 1/2" (316 SS)	5/8" Flat washer (316 SS)	5/8" Lock washer (316 SS)	Stiffener Ring	Stiffener Ring Bolt w/ Nut 5/8"-11 x 3/4" (Mech. Galv.)	5/8" Lock washer (Mech. Galv.)	Eye Bolt W/ Nut 3/4"-10 x 2" (Mech. Galv.)	Pin, Grooved, 1/2" X 1-1/2"	110" Diameter "K" Seal Disc Kit*	Tuf-Lite III <sup>®</sup> Blade (Teal Green)	
		ITEM		٢	ITEM	2	с	4		_	5	9	7	8	6	10	11	12	13	14	15	16	17

\* Includes all hardware (316 SS) to assembly and mount. \*\* Recommended on concrete and round towers, or corrosive environments. Contact Hudson for pricing.

#### HUDSON PRODUCTS CORPORATION Adjustable Pitch Fan Assembly 32.8' Diameter Series 6000MK HUB

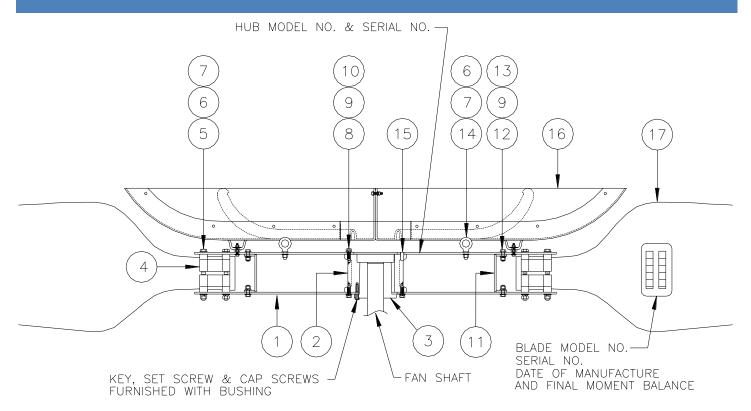

#### **STANDARD MATERIALS & FINISHES**

**Blades:** Fiberglass reinforced vinyl ester or epoxy **Hub Spool:** Ductile Iron, Zinc Rich Coating **Plates:** Coal Tar Epoxy coated steel **Bushing:** Malleable Iron **Seal Disc:** Fiberglass Reinforced Polyester

#### **Blade Clamps:**

Powder Epoxy Coated Die Cast Alum (Standard) Powder Epoxy Coated Ductile Iron (Option 1) Coal Tar Epoxy Coated Ductile Iron (Option 2) **Fasteners:** Steel, Mech. Galvanized & 316 SS Opt. Complete Fan with 316 SS (Option 1)

Complete Fan with K500 Monel (Option 2)

#### WHEN ORDERING, SPECIFY FAN DIAMETER, TYPE & NUMBER OF BLADES & SHAFT DIAMETER

EXAMPLE:

Fan Model Adjustable Pitch 32.8K

8

Number

of Blades

4 1/2" BORE

Shaft Diameter

Fan Diameter & Blade Type (Specify "K" for Tuf-Lite III<sup>®</sup> Blades) (Uses 30K Blades)



9660 Grunwald Rd. Beasley, Texas 77417-8600 Phone: 281-396-8100 Fax: 281-396-8388 1-800-634-9160 (24 Hours) <u>EMAIL: hudsonproducts@hudsonproducts.com</u> http://www.hudsonproducts.com

Hudson, Auto-Variable, Combin-Aire, Exact-A-Pitch, Fin-Fan, Heatflo, Hy-Fin, Split-Flo, Solo Aire, Stac-Flo, Steamflo, Thermflo, Tuf-Edge, Tuf-Lite, Tuf-Lite II, and Tuf-Lite III are registered trademarks of Hudson Products Corporation.

©2012 Hudson Products Corp. All Rights Reserved.